



HP Mini 110-3735dx Battery Replacement

Removing the Battery from your HP Mini 110-3735dx

Written By: Tyrone Williams



INTRODUCTION

If your battery is not working properly, follow this guide to replace it. This is also a prerequisite guide to many other replacements for the HP Mini 110-3735dx.

Step 1 — Battery



- With the bottom of the HP Mini facing up, slide both switches inward towards each other.

Step 2



- With the left switch still pushed inward, pull the battery towards you to remove it from the computer.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-25 04:14:49 PM.